

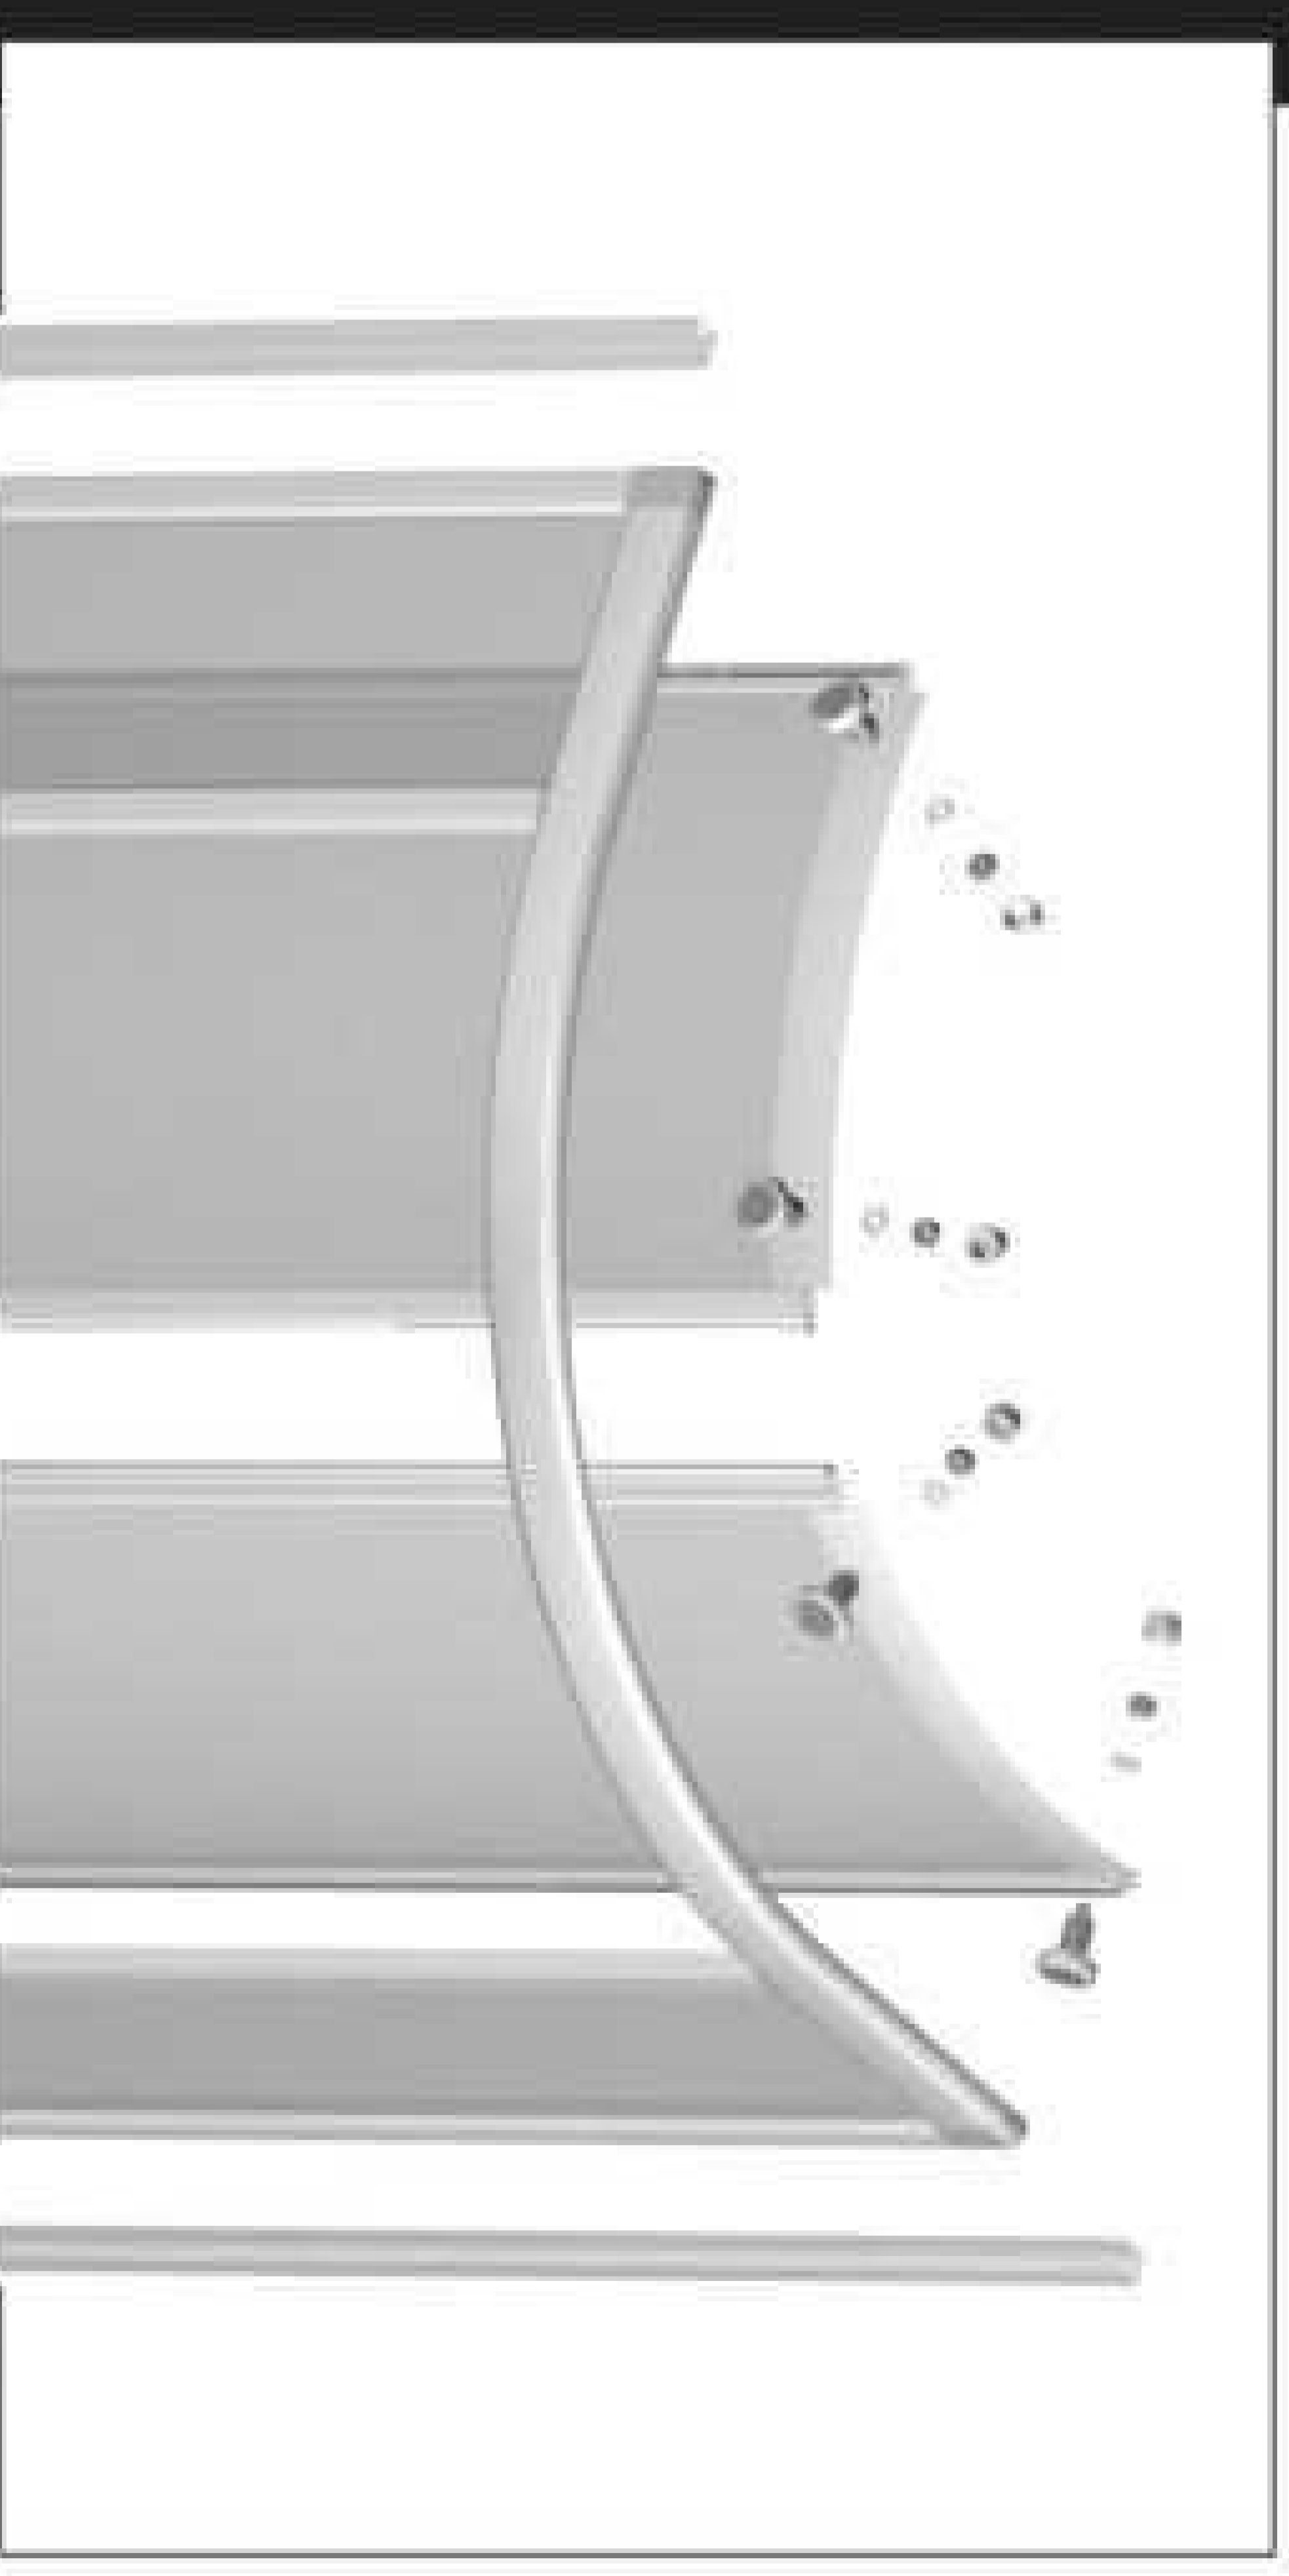
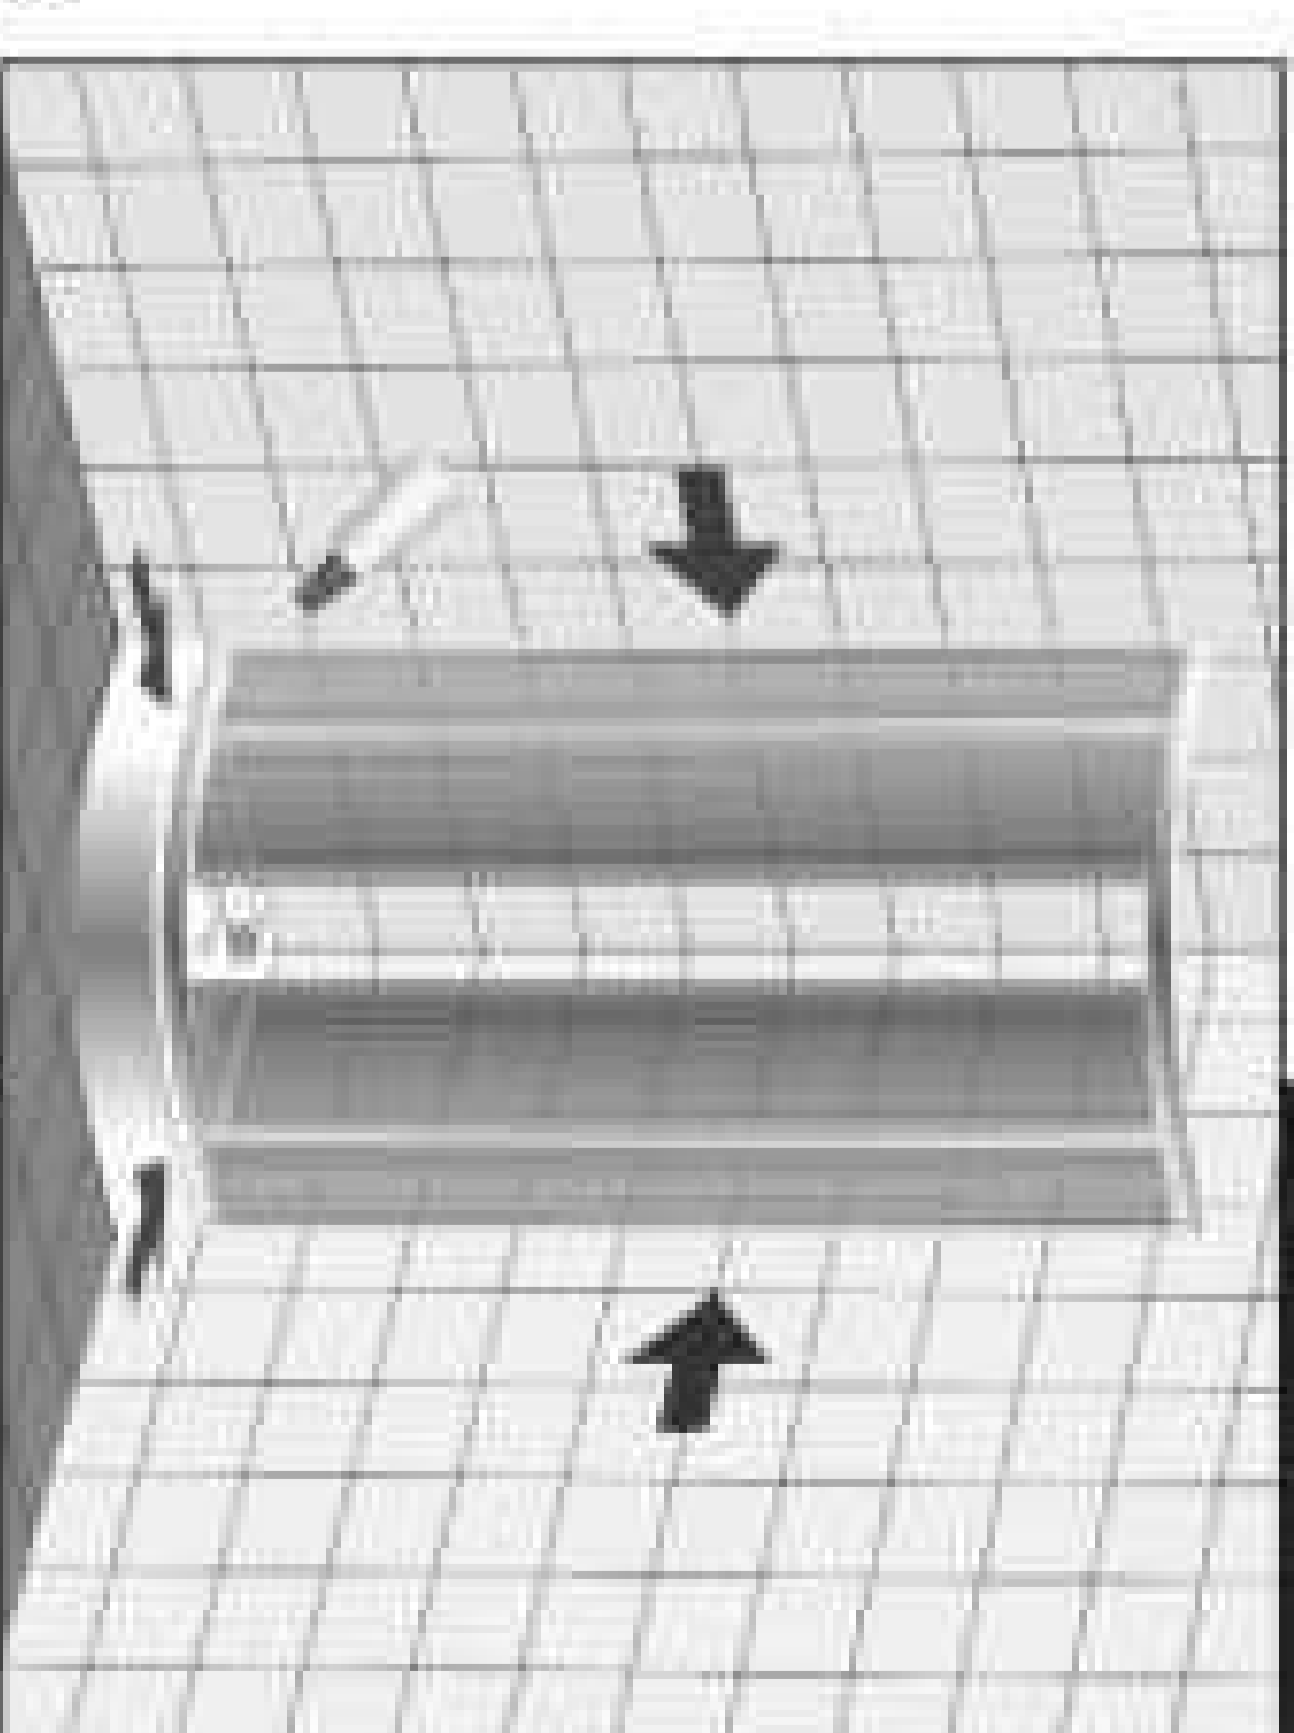
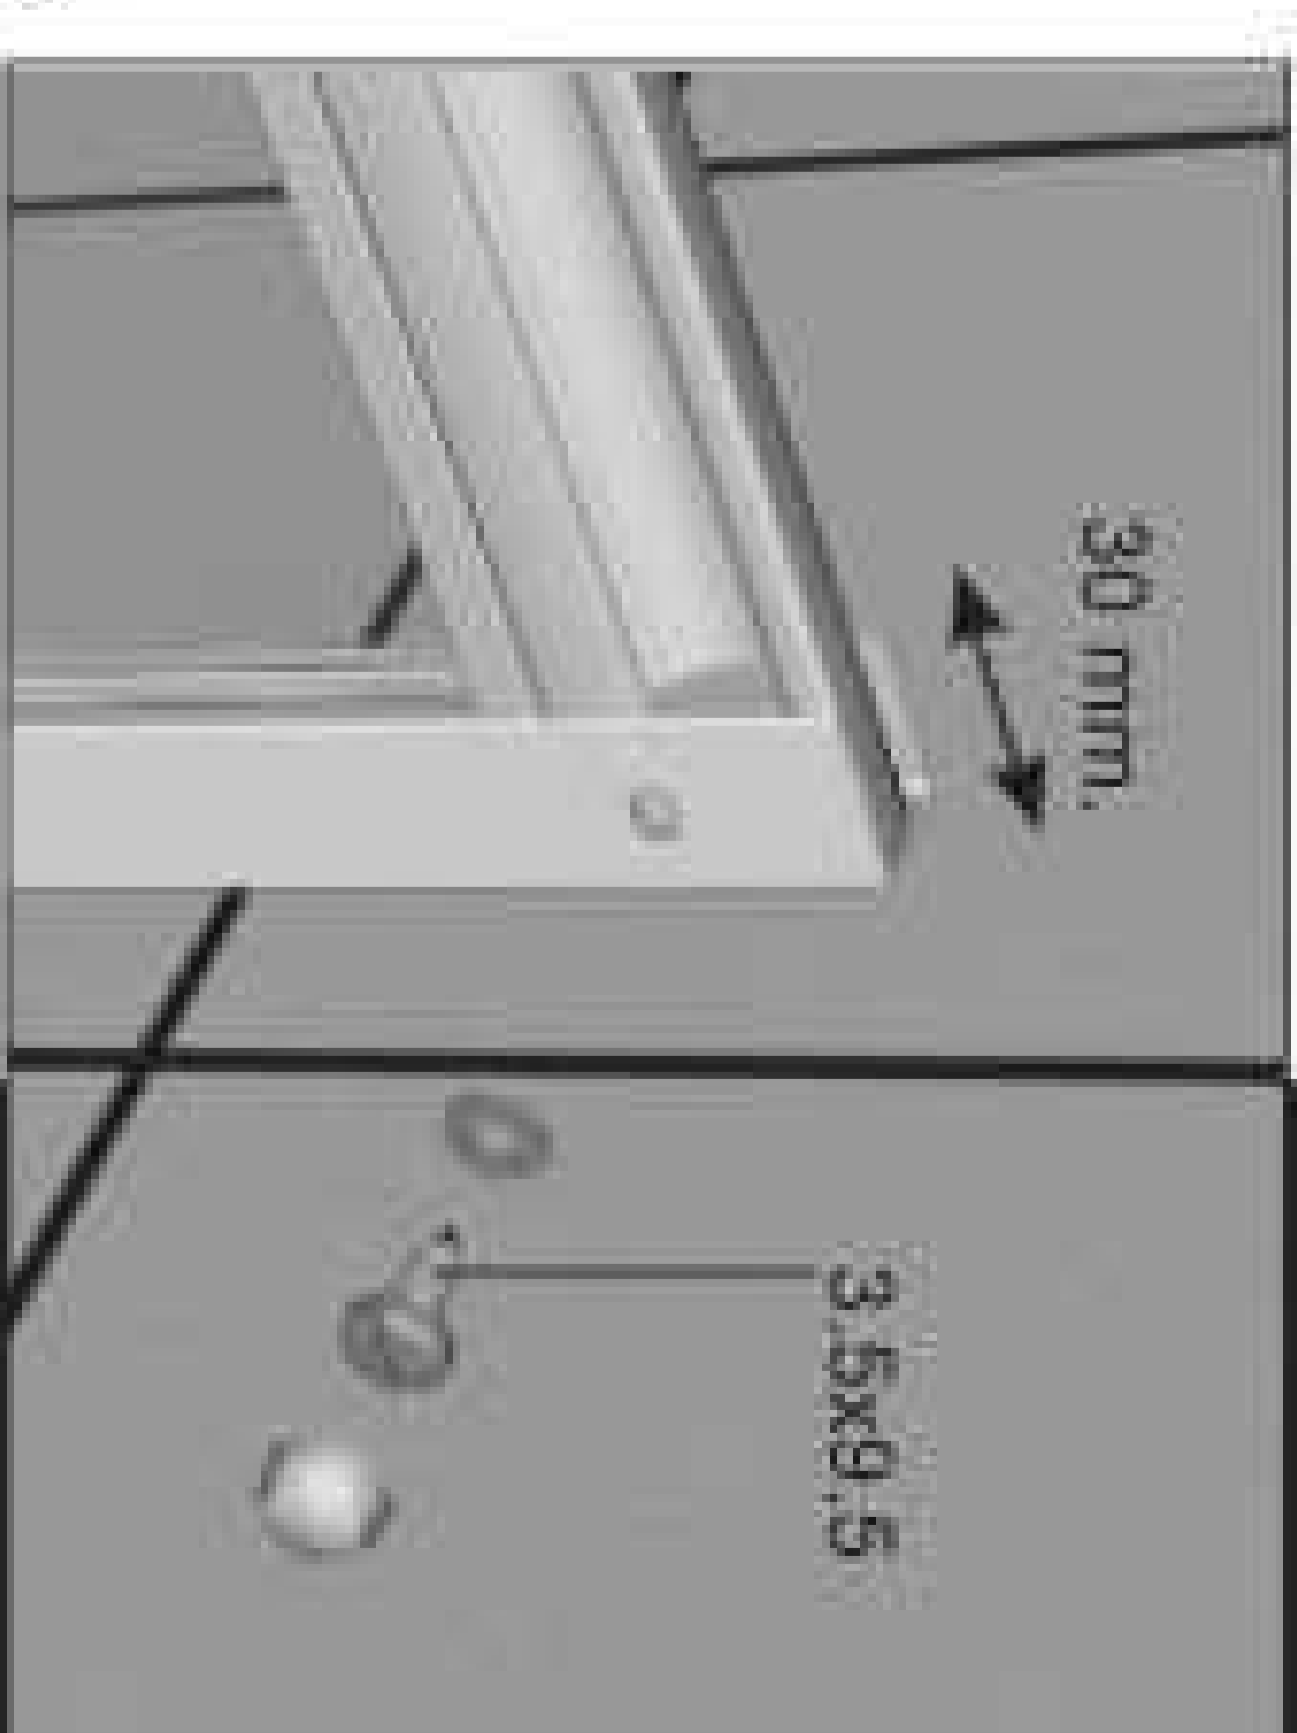
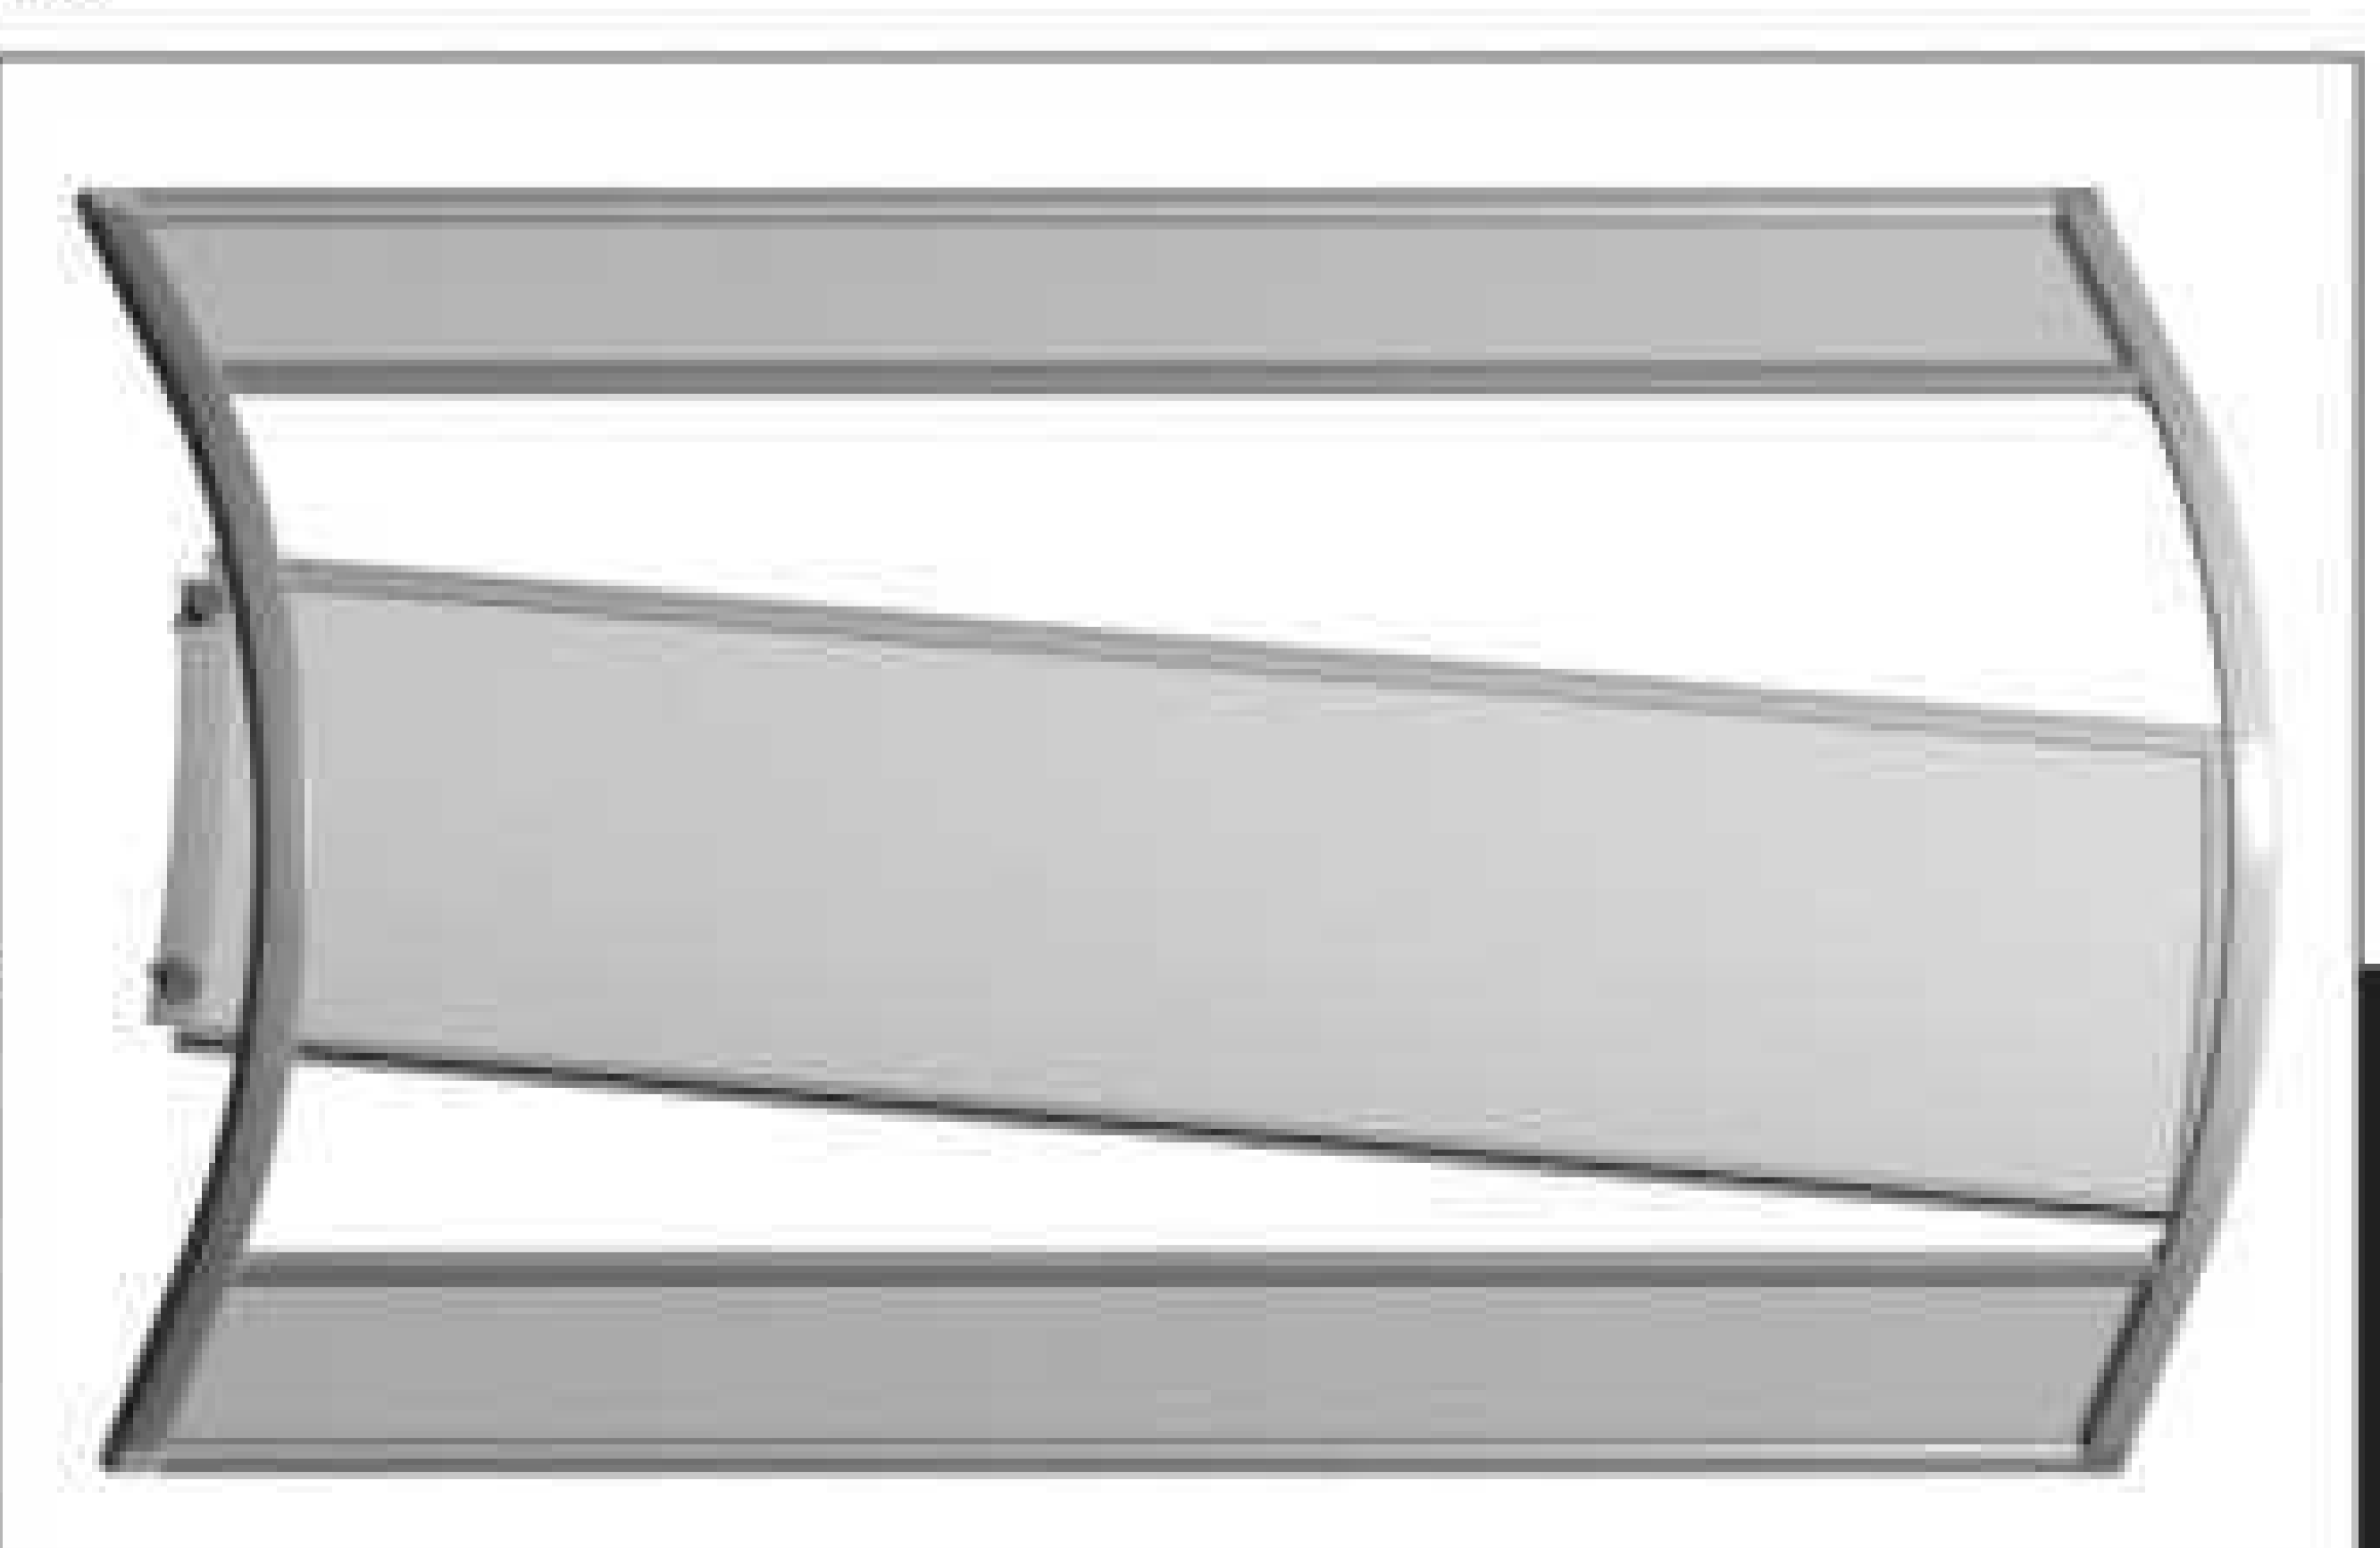
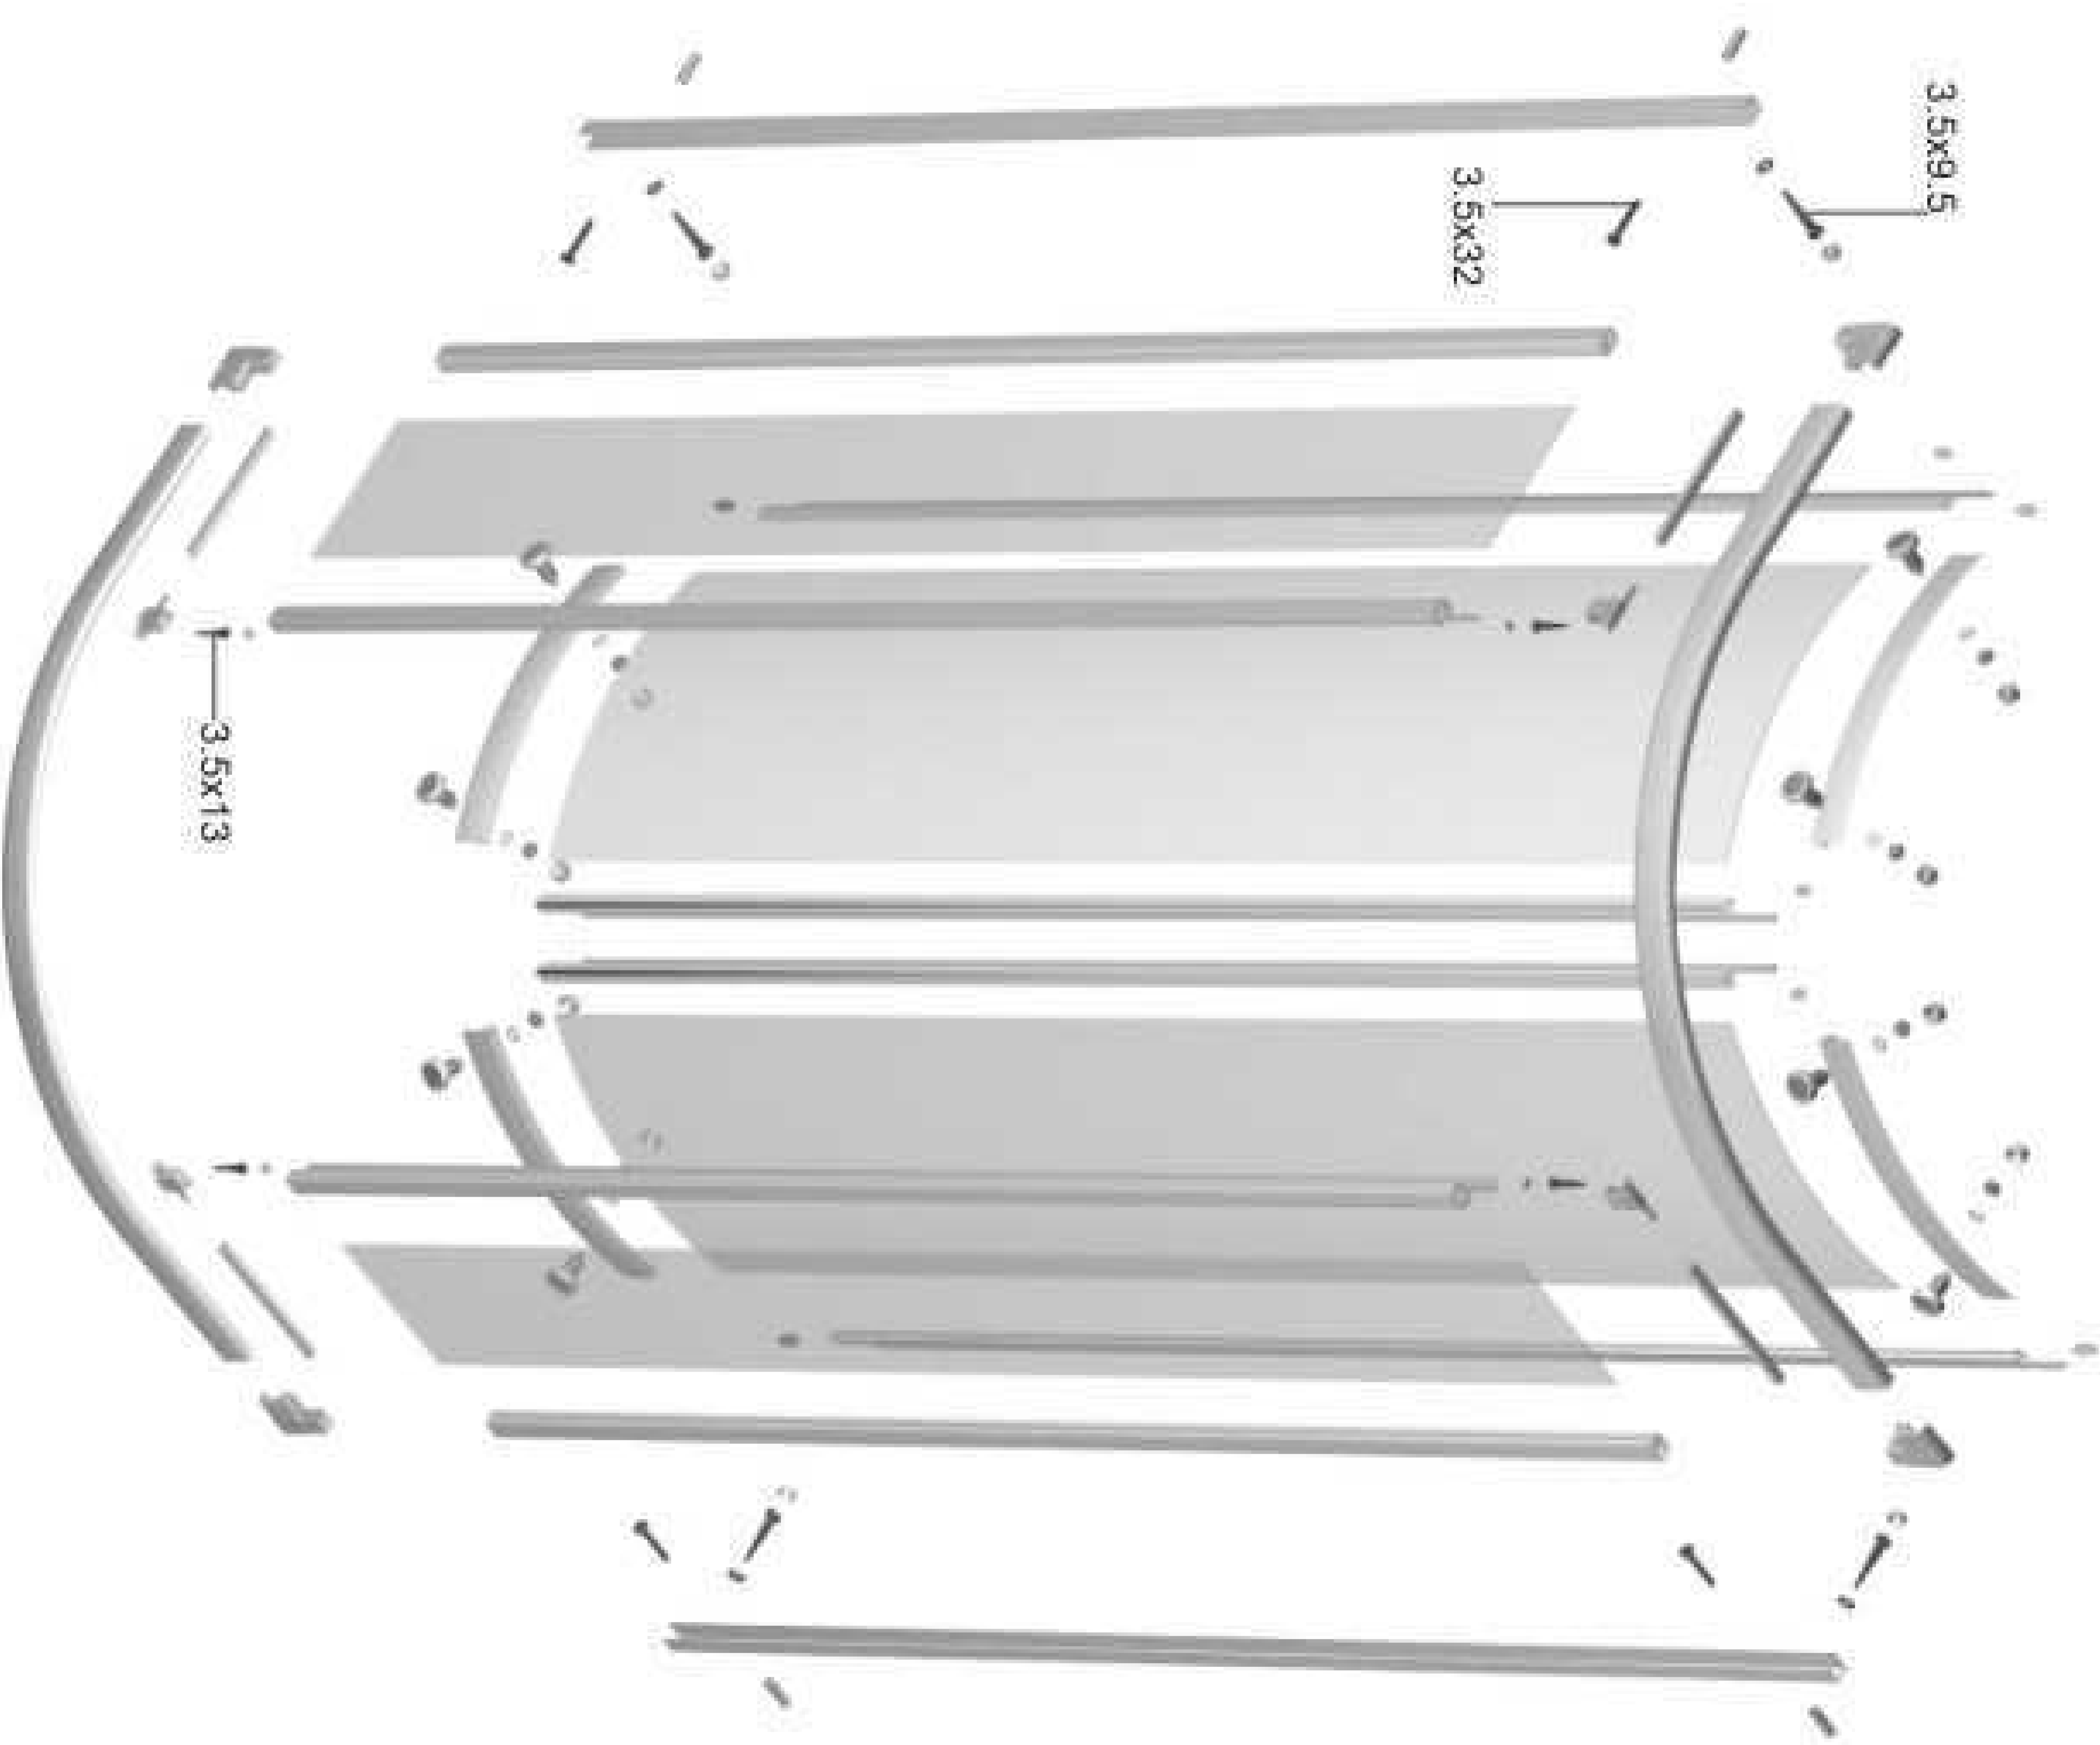
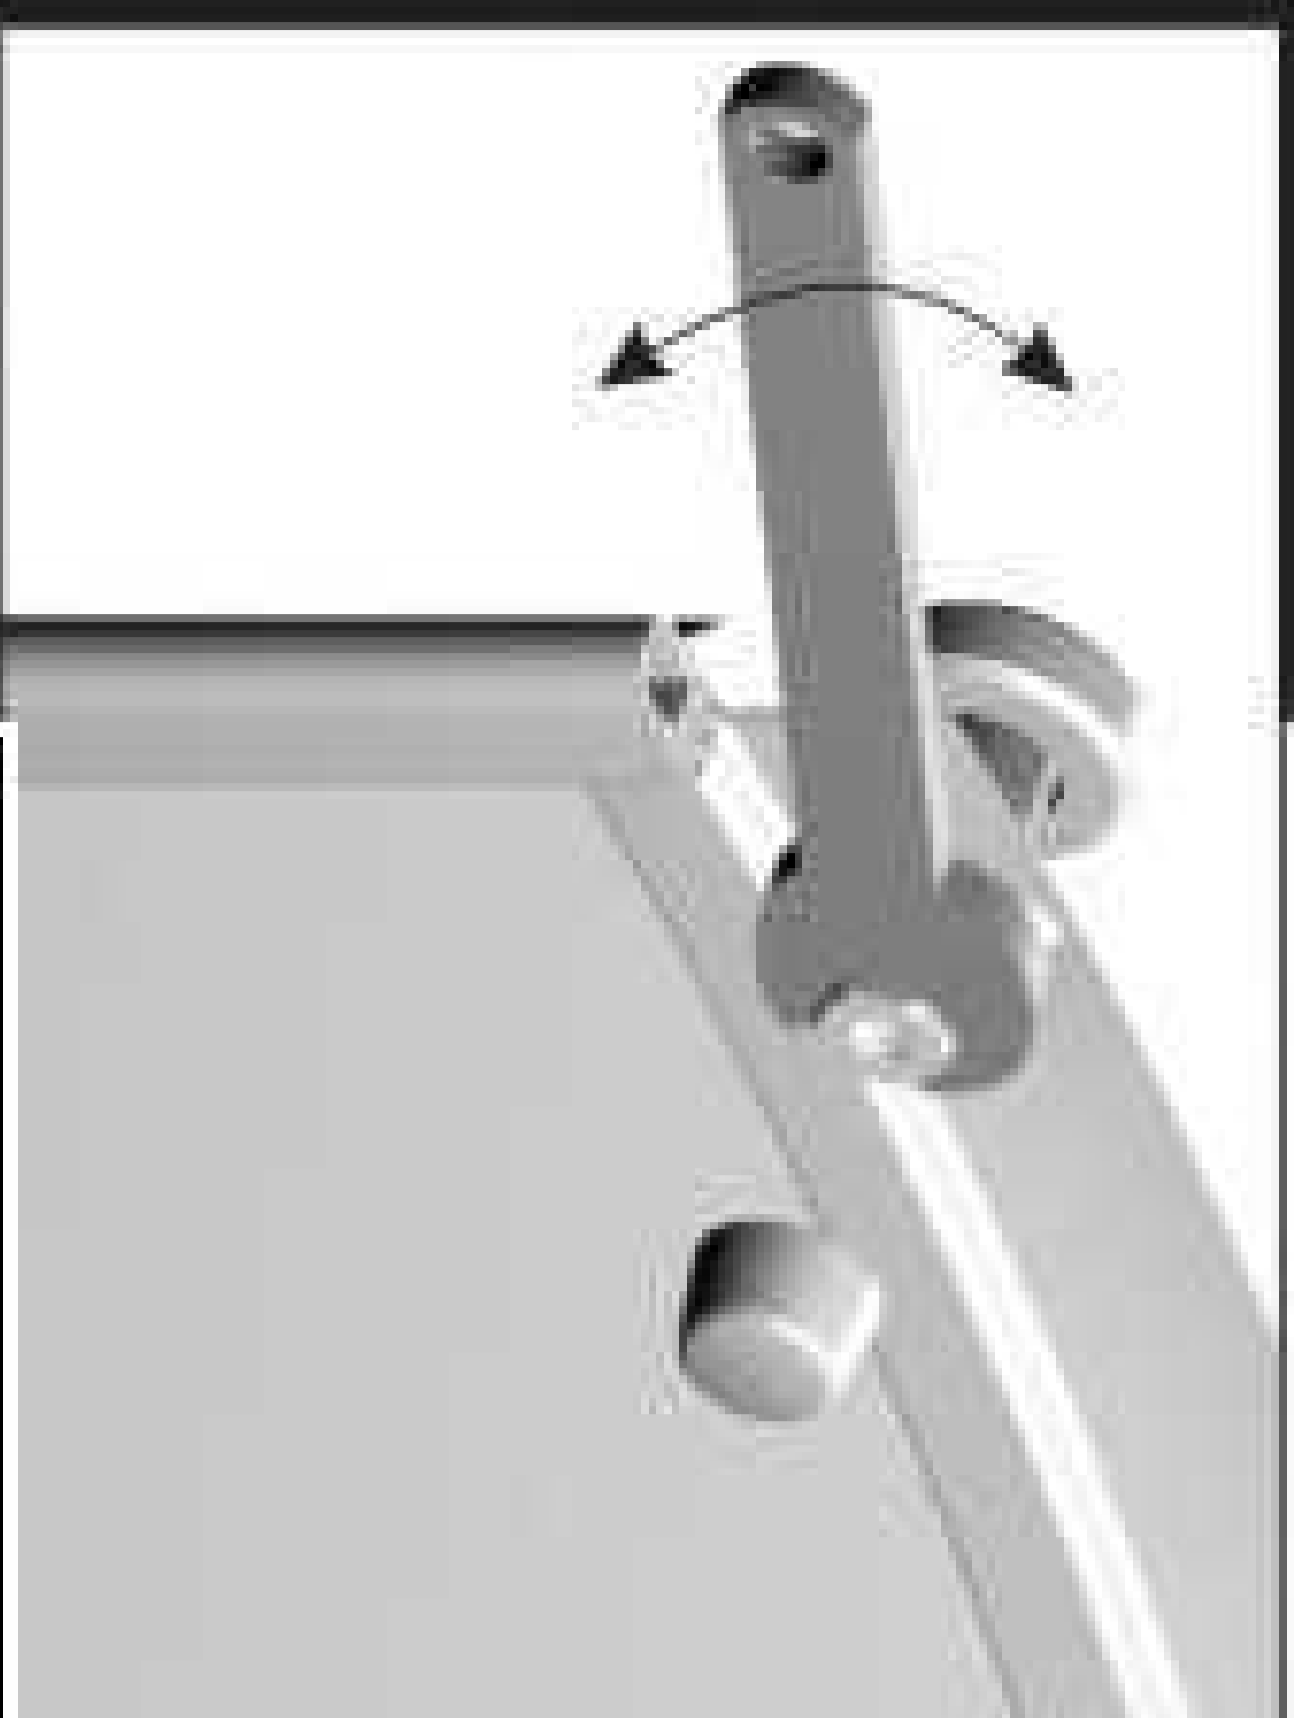
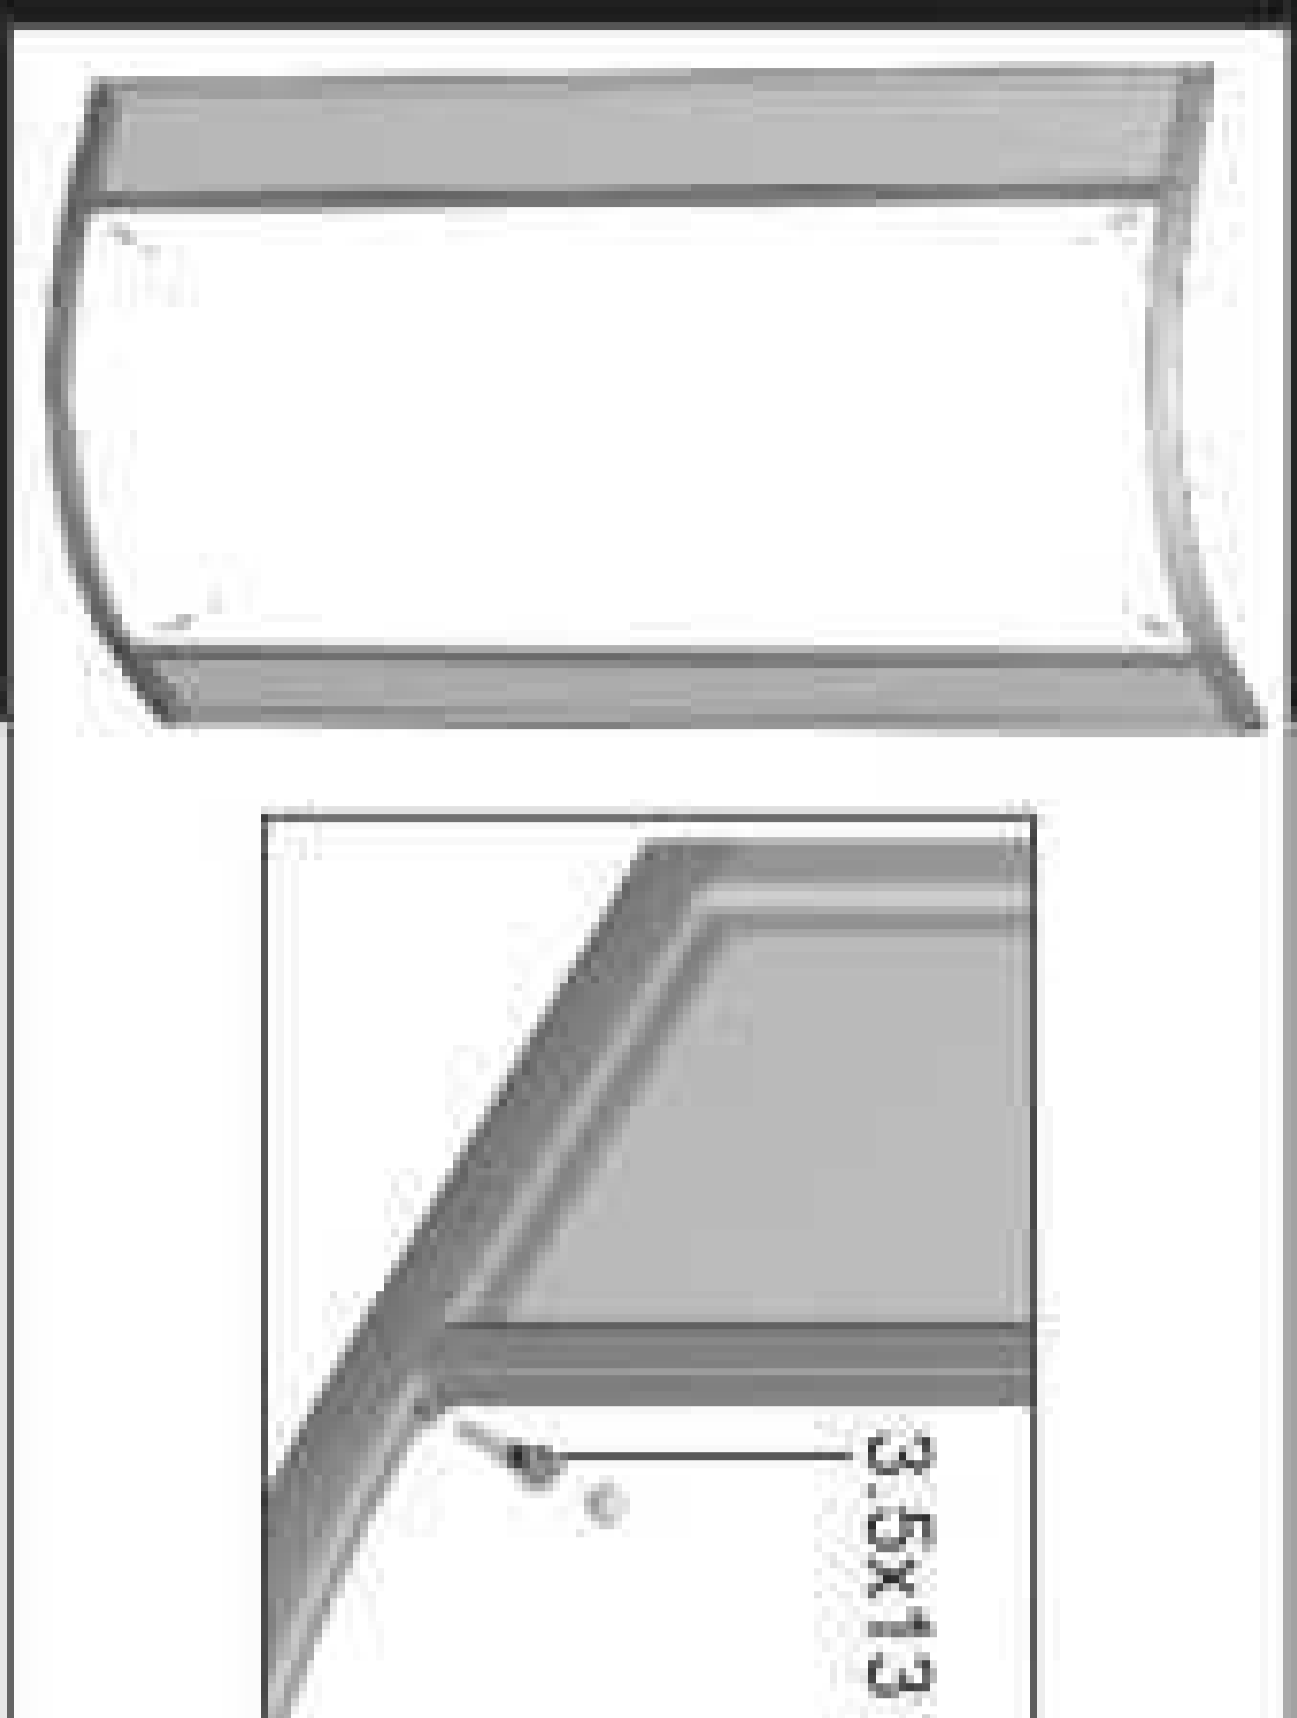


CE

Semicircolare apertura scorrevole

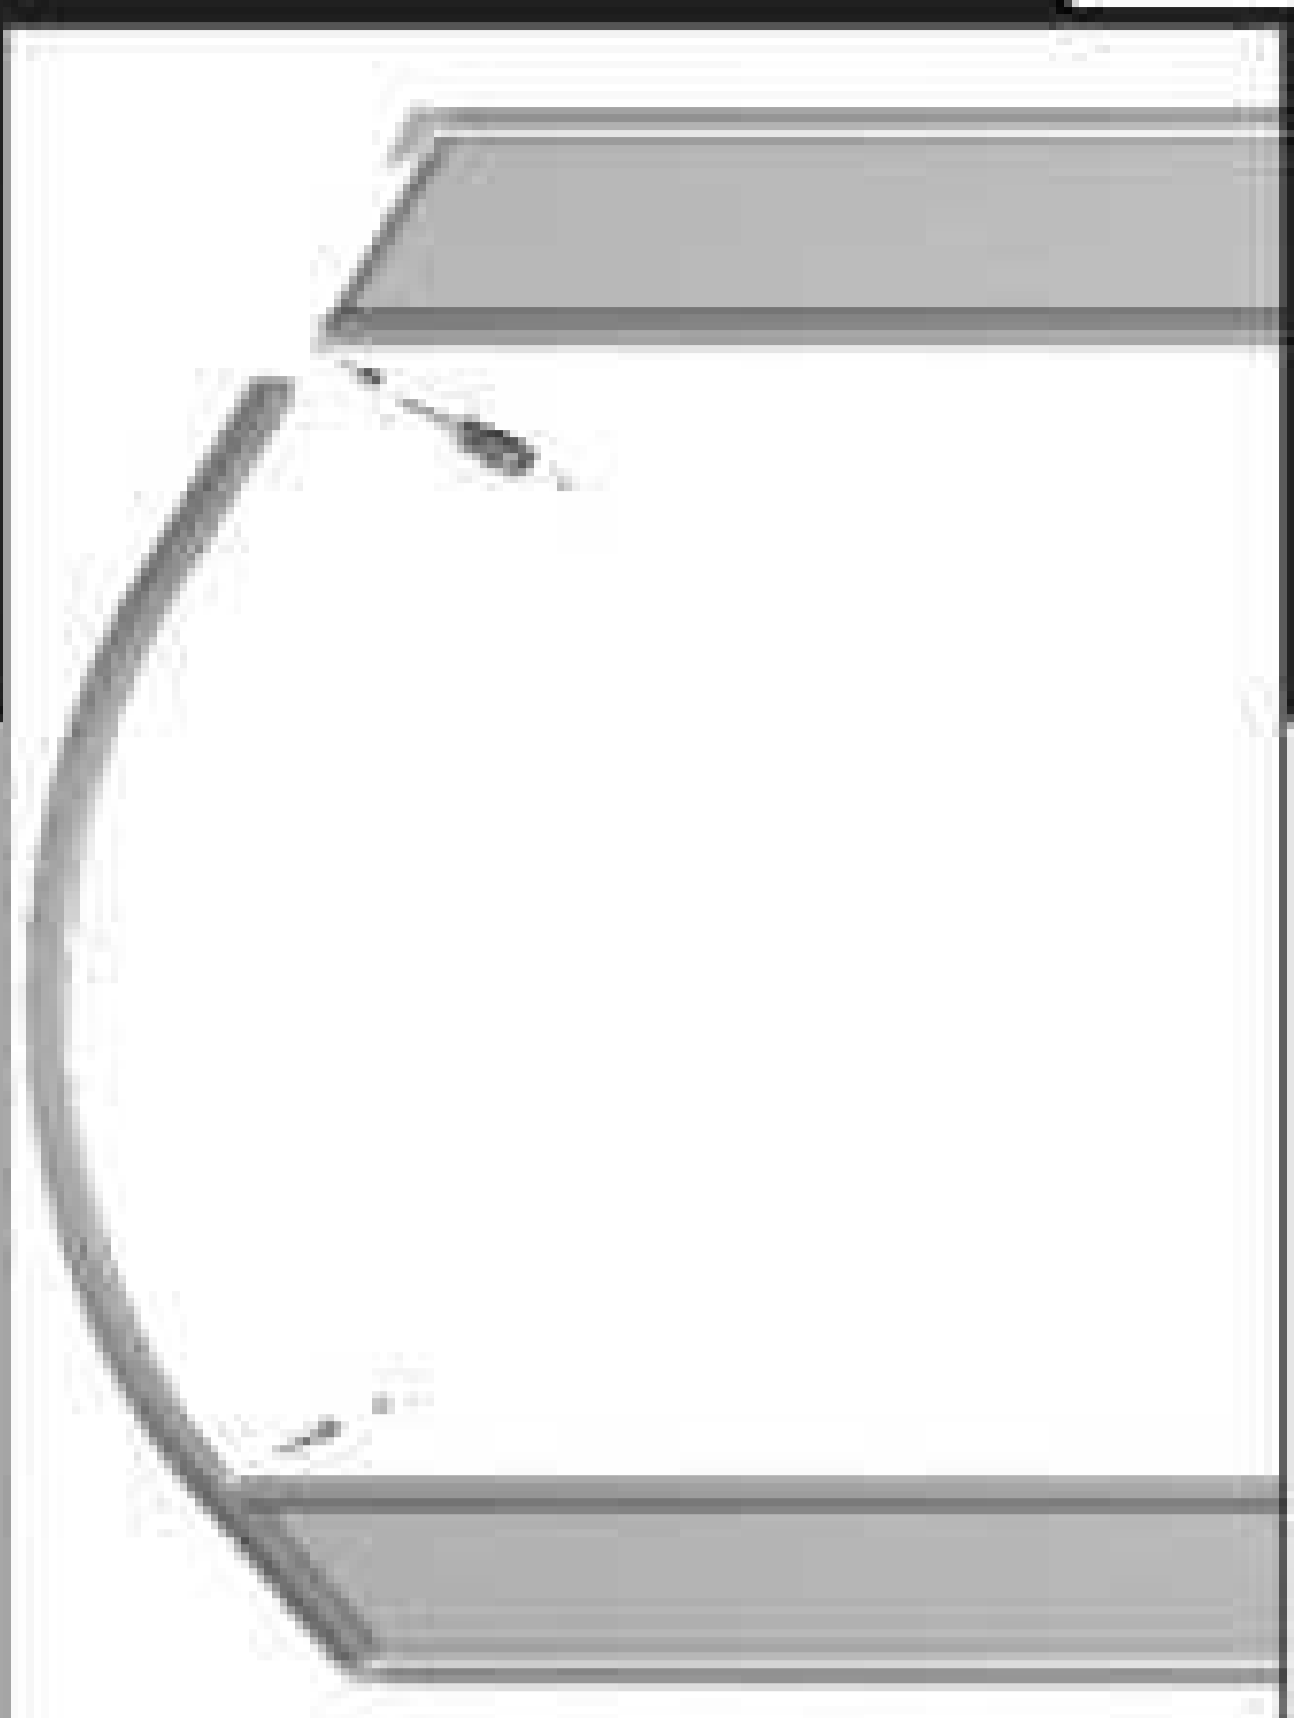

ATTENZIONE! ALLENTARE LE VITI DELLE ROTELLE PRIMA DEL MONTAGGIO DELLA CABINA.
 ATENCIONI! AFLOJEN LOS TORNILLOS DE LAS RUEDAS ANTES DE MONTAR LA CABINA.
 ATTENTION! LOOSEN THE SCREWS OF THE WHEELS BEFORE MOUNTING THE SHOWER BOX.
 ATTENTION! DESSERRER LES VIS DES ROULETTES AVANT DE MONTER LA CABINE.
 ACHTUNG! LOCKERN SIE DIE SCHRAUBEN DER ROLLEN VOR DER MONTAGE DER
 DUSCHKABINE.

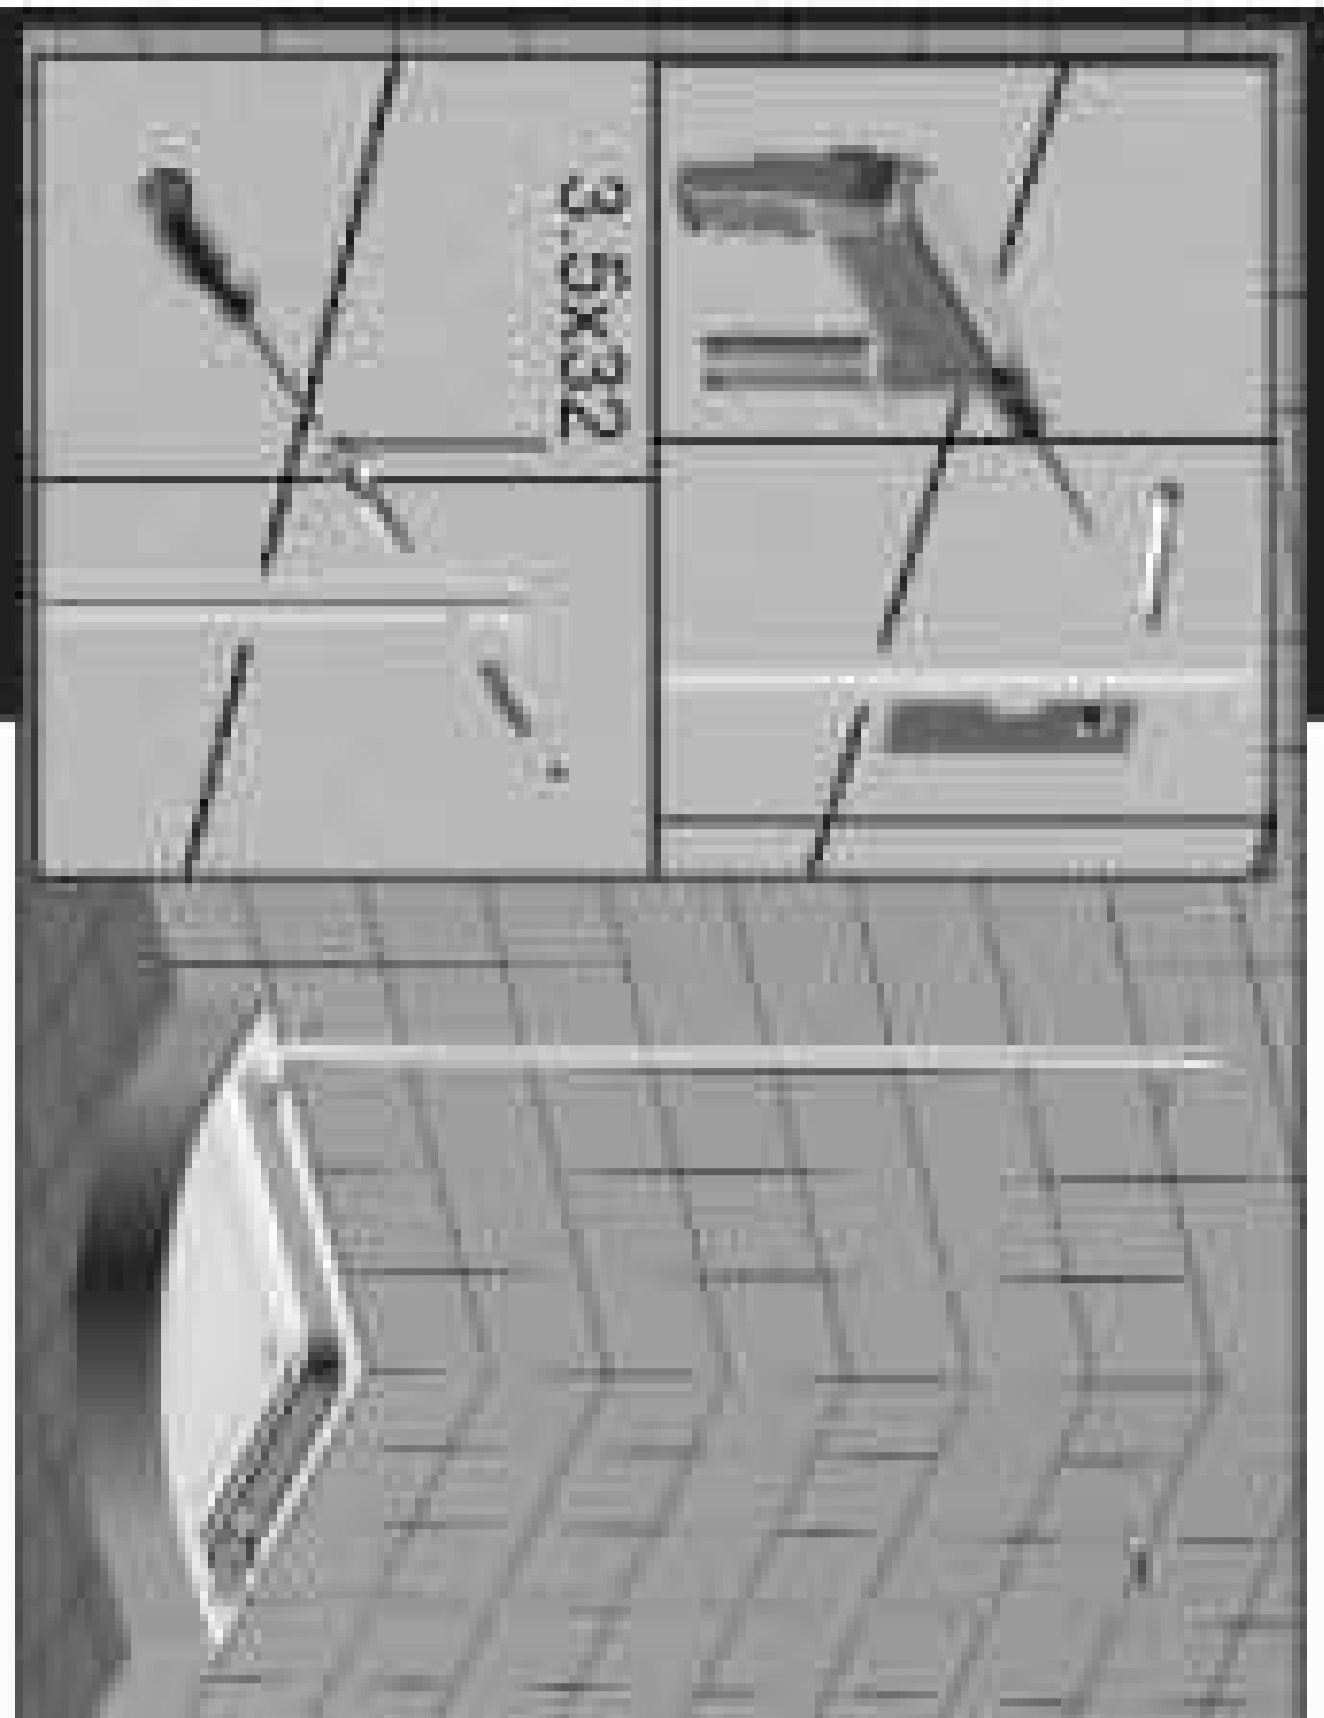

ATTENZIONE! PULIRE CON ACQUE BIANCHE O AL COOL
 NON USARE SOLVENTI O PRODOTTI ABRASIVI